

Model A5120 Spray Gun Parts List

January 1, 2002

Diagram #	Part #	Description
1	A5200	Air cap ring
2	A5201	Air cap # 1
2	A5297	Air cap # 2
3	A5203	Air distributor plate (stainless)
4	A5204	Air distributor spring (stainless)
6	A5206	Fluid nozzle/jet (stainless) .75MM
6	A5207	Fluid nozzle/jet (stainless) 1.00MM
6	A5208	Fluid nozzle/jet (stainless) 1.50MM
6	A5208-2	Fluid nozzle/jet (stainless) 2.00MM
6	A5209	Fluid nozzle/jet (stainless) 2.50MM
7	A5210	Fluid nozzle gasket
8	A5211	Air feed connector
9	A5212	Gun casting
10	A5213	Trigger bushing
11	A5214	Trigger pivot screw (stainless)
12	A5215	Trigger screw washer
13	A5216	Upper port insert
14	A5217	Air blanking plug
14a	A5227	Air hose quick release coupler (male)
15	A5218	Needle (stainless) .75MM
15	A5219	Needle (stainless) 1.00MM
15	A5220	Needle (stainless) 1.50MM
15	A5220-2	Needle (stainless) 2.00MM
15	A5221	Needle (stainless) 2.50MM
16	A5222	Needle spring (stainless)
17	A5223	Flow screw insert
18	A5224	Material flow adjusting screw
19	A5259	Air blanking plug
20	A5260	Air valve assembly
21	A5261	Air coupler 1/4 NPT brass
22	A5228	Gland seal
23	A5229	Gland nut (stainless)
24	A5230	Trigger (stainless)
25	A5232	Air feed tube and non-return valve
26	A5403	Material pick-up tube
27	A5404	Lid assembly
28	A5402	Gasket (White poly)
29	A5401	8-oz. plastic cup
35	A5252	Fluid connector, 1/4" (stainless)
	A5400	Storage lid
	A5405	Pack of (4) 8-oz. cups with lids