



# ApolloSpray A5610 Q/R Cup Gun

Diagram & Parts List  
760-727-8300

Diagram #	Part #	Description
1	A5200	Air cap ring
2	A5201	Air cap # 1
2	A5297	Air cap # 2
3	A5203	Air distributor plate (stainless)
4	A5204	Air distributor spring (stainless)
5	A5212	Spray Gun Body
6	A5206	Fluid nozzle/jet (stainless) .75MM
6	A5207	Fluid nozzle/jet (stainless) 1.00MM
6	A5208	Fluid nozzle/jet (stainless) 1.50MM
6	A5208-2	Fluid nozzle/jet (stainless) 2.00MM
6	A5209	Fluid nozzle/jet (stainless) 2.50MM
7	A5210	Fluid nozzle gasket
8	A5211	Air feed connector
9	A5213	Trigger bushing
10	A5214	Trigger pivot screw (stainless)
11	A5215	Trigger screw washer
12	A5216	Upper port insert
13	A5217	Air blanking cap
14	A5218	Needle (stainless) .75MM
14	A5219	Needle (stainless) 1.00MM
14	A5220	Needle (stainless) 1.50MM
14	A5220-2	Needle (stainless) 2.00MM
14	A5221	Needle (stainless) 2.50MM
15	A5222	Needle spring (stainless)
16	A5523	Flow screw insert
17	A5224	Material flow adjusting screw
18	A5259	Air blanking plug
19	A5260	Air valve assembly
20	A5261	Air coupler 1/4 NPT brass
21	A5228	Gland seal
22	A5229	Gland nut (stainless)
23	A5230	Trigger (stainless)
24	A5299	Air feed tube
25	A5274	Center bolt/pick-up tube
26	A5271	Yoke
27	A5278	Lever
28	A5270	Cup top casting
29	A5272	Cup top lock nut
30	A5280	Cup top gasket (White poly)
31	A5277	Quick release cup (Teflon coated)
32	A5324	Air stem Q/R cup
33	A5322	Teflon O-ring
34	A5321	Duckbil Check Valve
35	A5254	Fluid connector 3/8" (stainless)